

Bench Slipper Options

- BS1** - Protects wooden feet from water damage and eventual rot and decay. Most needed on concrete where wooden feet wick water every time you water plants.
- BS2** - Has a leveler adjustable to 1" in height for angled greenhouse floors. Also protects wooden feet from water damage and decay.
- BS3** - Has a caster for mobility. Two locking casters and two regular casters supplied per bench. Protects from water damage and adds mobility for cleaning and resetting of displays.

Assembly Instructions

- BS1** - Drive the slipper onto the leg foot until the wood shows in the corners. **See Photo 1**
- BS2** - Repeat above and screw in the leveler to desired height. **See Photo 1 & 2**
- BS3** - Repeat above. Screw in caster to full depth. Tighten nut at top of caster with special wrench provided. **See Photos 1-4**. Use locking casters on opposite corners of bench.
Tip: To change caster height for uneven floors, add washers over the stem before screwing in caster.



Photo 1



Photo 2

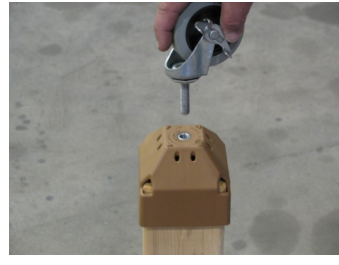


Photo 3



Photo 4