


Photo #3



Part H

Photo #4

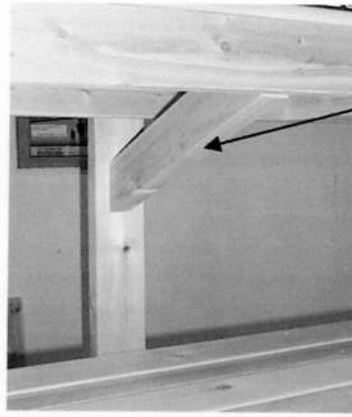

Part I

Step 6: Attach the long back brace, Part H (2"x 4"x 60"), to the center back of the unit by placing the top of the brace flush with the top of the top shelf 2x4. **See photo #3.** Drill pilot holes and attach using the lag bolts into the pre-drilled holes.

Step 7: To attach the short angled brace, put 2-2/1/2" screws through the front of the top shelf 2x4 and into the short angled brace ends. Then put 2-2/1/2" screws through the back brace and into the short angled brace ends. **See photo #4.**

With the new pallet channels this unit can now be easily moved with a pallet jack or forklift. This is an excellent display for pottery, bagged goods and plants.

For questions or ordering information contact
Bench Systems customer service at 1-888-881-3081
www.benchsystems.com