

Giftware Display Hutch G4872 Assembly Instructions

Kit Contents:

2-sides w/tracks 11 1/4"x 71 1/4"
2-back panels 24"x72"
1-top 12 3/4"x 51" routed edges
1- paneled door assembly 30"x 48"
4-shelves 11 1/4"x 46 1/2"
1-shelf 10 1/2"x 46 1/2"(inside cabinet)

Screw pack Contents:

20 - 1 1/4" screws
24 - nails
6 - 2" screws
6 - 3" screws
2 - pan head screws
2 - knobs
12 - shelf supports



**Before beginning the project, unpack the box and lay out the pieces and hardware.
The box can be flattened to use as a work surface.**

Step 1: Place the two sides across from each other with the tracks facing inward. The metal glides will be the bottom of the unit. **Photo 1** Place the bottom shelf (11 1/4"W) onto the top of the bottom cleats of the two sides. Attach by inserting three 2 1/2" screws per side into the predrilled holes of the cleat bottoms & into the shelf. See **Photo 2**

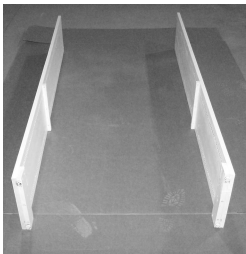


Photo 1



Photo 2



Photo 3



Photo 4

Step 2: Place the second shelf (11 1/4"W) onto the top of the side cleats and attach like the first, using three 1 1/4" screws per side. **Photo 3**

Step 3: Position the top board with the decorative routed edges facing down and toward the front of the unit. The back of the top board will be flush with the back of the unit. The top board overhangs on both sides. Attach one end of the top board with three 2" screws inserted down through the predrilled holes and into the sides. **Photo 4** Before attaching the other side of the top, measure across the outside of the unit to make sure it is 48" and then attach the other side using three 2" screws inserted down through the predrilled holes in the top board and into the sides.